

# SURFACE / FLUSH MOUNT - SHARED USE MODE: WESKO LOCK APP

DOWNLOAD / REGISTER THE APP

DOWNLOAD 'WESKO LOCK APP'



Register

CLICK 'NEW? SIGN UP HERE'

FIND AVAILABLE eLock

USE 'FIND ME' PAIRING

A. ON KEYPAD PRESS **1 1 P**

B. TAP ON TOP BAR THEN "Scan for eLocks"

C. FIND GREEN TILE ON APP SCREEN

OR

USE APP

FIND UNLOCKED TILE



LOCK / UNLOCK



TO LOCK



1. TURN THE KNOB TO LOCK POSITION



2. TAP ICON TO LOCK



LOCKER NUMBER



LOCKER NUMBER

3. TILE TURNS BLUE



TO UNLOCK



1. USE BLUE TILE TO FIND LOCKER



 
2. TAP ICON TO UNLOCK



LOCKER NUMBER



LOCKER NUMBER



3. BLUE TILE DISAPPEARS  
TURN KNOB TO UNLOCK POSITION

CHARGING



LOW BATTERY



LOCKER NUMBER



PLUG IN USB CHARGER












SUPPORT@WESKO-ELOCKS.COM | 905 629 3227 | WESKO-ELOCKS.COM

# SURFACE / FLUSH MOUNT ELOCK - SHARED USE MODE: KEYPAD

USE ANY 4 DIGITS TO LOCK, AND THE SAME TO UNLOCK  
LOST / FORGOTTEN CODE REQUIRES ADMIN TO UNLOCK

## DAILY USE

 <b>TO LOCK</b>	  1. TURN THE KNOB TO LOCK POSITION    2. ENTER ANY 4-DIGIT PASSCODE, THEN PRESS <input checked="" type="checkbox"/>												
 <b>TO UNLOCK</b>	  1. ENTER SAME 4-DIGIT PASSCODE, THEN PRESS <input checked="" type="checkbox"/> 2. TURN THE KNOB TO UNLOCK POSITION												
 <b>BATTERY LEVEL</b>	 <b>PRESS 2, THEN P</b> <div data-bbox="808 733 1206 780" style="border: 1px solid black; border-radius: 15px; padding: 5px; display: inline-block;">LED STATUS INDICATOR</div> <table data-bbox="829 800 1252 919" style="margin-left: 20px;"><tbody><tr><td><input checked="" type="radio"/></td><td><input type="radio"/></td><td><input type="radio"/></td></tr><tr><td><input type="radio"/></td><td><input checked="" type="radio"/></td><td><input type="radio"/></td></tr><tr><td><input type="radio"/></td><td><input type="radio"/></td><td><input checked="" type="radio"/></td></tr><tr><td><b>FULL</b></td><td><b>LOW</b></td><td><b>NEED TO CHARGE</b></td></tr></tbody></table>  <b>PLUG IN USB CHARGER</b>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>	<b>FULL</b>	<b>LOW</b>	<b>NEED TO CHARGE</b>
<input checked="" type="radio"/>	<input type="radio"/>	<input type="radio"/>											
<input type="radio"/>	<input checked="" type="radio"/>	<input type="radio"/>											
<input type="radio"/>	<input type="radio"/>	<input checked="" type="radio"/>											
<b>FULL</b>	<b>LOW</b>	<b>NEED TO CHARGE</b>											